

# Controlpanel «move»

USER MANUAL



Lista AG  
Fabrikstrasse 1  
CH-8586 Erlen


Telefon +41 71 649 21 11  
info@lista.com  
www.lista.com



## TABLE OF CONTENT

<b>1. User interface guide and reset</b> .....	<b>4</b>
<b>2. Adjusting the height</b> .....	<b>4</b>
<b>3. Setting the upper and lower height limit</b> .....	<b>5</b>
3.1 Setting the upper height limit.....	5
3.2 Disable the upper height limit.....	5
3.3 Setting the lower height limit.....	5
3.4 Disable the lower height limit.....	5
<b>4. Error codes</b> .....	<b>6</b>

## 1. USER INTERFACE GUIDE AND RESET

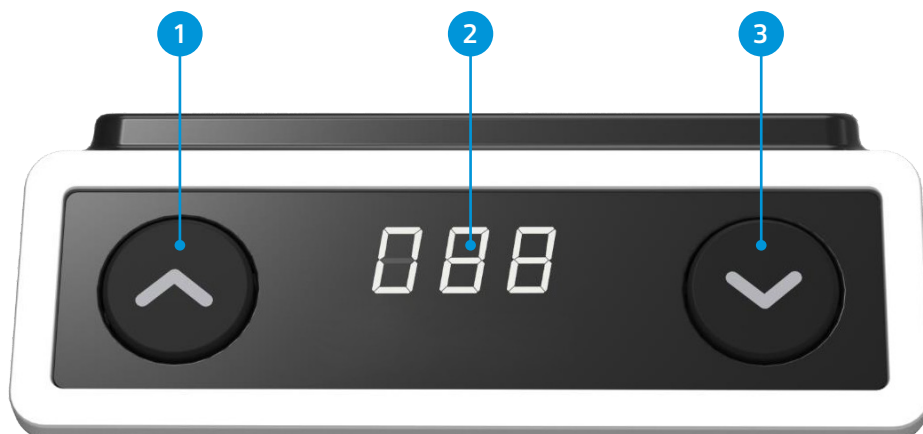

- 1 UP BUTTON
- 2 3-DIGIT HEIGHT DISPLAY
- 3 DOWN BUTTON

### RESET

1. Simultaneously press **UP** and **DOWN** for 3 seconds. Continue pressing the buttons until both columns are in the lowest position. When finished with the reset, the control box will make a **beep** sound and the buttons can be released.
2. When finished with the reset, the display will show the starting height.
3. Users must conduct a reset when operating the desk for the first time.

## 2. ADJUSTING THE HEIGHT

Press **UP** or **DOWN** button until the desk reaches the preferred height.

### 3. SETTING THE UPPER AND LOWER HEIGHT LIMIT

#### 3.1 SETTING THE UPPER HEIGHT LIMIT

1. Adjust the desk to the preferred upper height limit.
2. Press **UP** and **DOWN** buttons together for less than 3 seconds, holding **UP** and **DOWN** release button.
3. Re-press **DOWN** for more than 3 times at a slow pace.
4. A beeping sound will notify you that the process has been completed.

#### 3.2 DISABLE THE UPPER HEIGHT LIMIT

1. Move the desk to the upper height limit being set.
2. Repeat instructions #2~4 above to disable the upper limit setting.

#### 3.3 SETTING THE LOWER HEIGHT LIMIT

1. Adjust the desk to the preferred lower height limit.
2. Press **UP** and **DOWN** buttons together for less than 3 seconds, holding **UP** and **DOWN** release button.<sup>1</sup>
3. Re-press **UP** for more than 3 times at a slow pace.
4. A beeping sound will notify you that the process has been completed.

#### 3.4 DISABLE THE LOWER HEIGHT LIMIT

1. Move the desk to the lower height limit being set.
2. Repeat instructions #2~4 above to disable the lower limit setting.

<sup>1</sup> More than 3 seconds will direct to "Reset" mode.

## 4. PRESETTING THE DESK STARTING HEIGHT

1. Press **DOWN** button until the desk reaches its lowest position and then release **DOWN** button. Re-press **DOWN** button again for 5 seconds and the digital display will flash for 10 seconds.
2. Adjust the starting height number with the **UP** or **DOWN** buttons.
3. After 10 seconds, the display will stop flashing and this will confirm that you have successfully set the starting height.

## 5. ERROR CODES

The digital display shows the error codes below to suggest the issues that users may encounter during the operation.

Error code	Descriptions
000	Resetting
E00	Not reset completely
E01	Overuse protection
E02	Unbalance protection
E03	Anti-collision
E04	T-touch Protection
E11	M1 Motor over-current protection
E12	M2 Motor over-current protection
E13	M3 Motor over-current protection
E21	No Hall sensor from M1
E22	No Hall sensor from M2
E23	No Hall sensor from M3
E31	No current from M1
E32	No current from M2
E33	No current from M3



