


DE CPU-HALTER
 EN CPU-HOLDER
 ES SOPORTE PARA CPU
 FR SUPPORT POUR CPU
 IT SUPPORTO PER CPU

USER MANUAL
 712.341 V01 11.2024

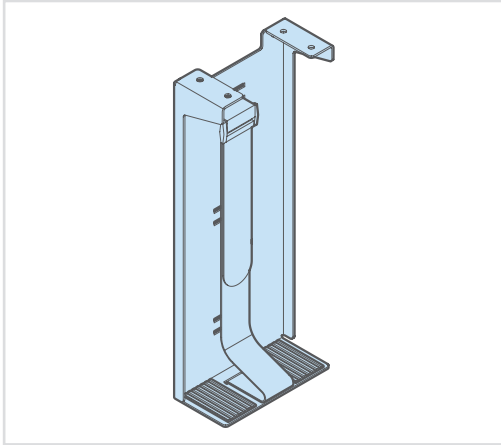

| | | |
|---|-------|--|
| a | 6x20 | |
| b | M6x10 | |
| c | M6 | |
| d | M6 | |

